

Thermo Scientific $^{\text{TM}}$ EASY-nLC $^{\text{TM}}$ Series Systems Spare Parts Guide

For ordering, please contact your sales / service representative

		ST71988	Updated: December 2019	Compatibility with:	
Part Number	Part Name	Additional Part Details / Desciption	Туре	Thermo Scientific TM EASY-nLC TM 1000	Thermo Scientific TM EASY-nLC TM 1200
00109-02-00055	adapter, HPLC, PEEK TM , 1/16"-1/32" tube, RoHS	Microtight* adapter for 1/16" to 1/32" OD tubing	Accessories	х	х
00109-02-00056	gauge plug, HPLC, microtight, 6-32rd, RoHS	Microtight® gauge plug for positioning 1/32" OD tubing in the appropriately sized zero dead volume union, natural Acetal (Delrin®) material, 6-32 UNF thread size	Accessories	х	X
6040.2303	Viper [™] blind plug Titanium	$\label{eq:Viper} Viper^{TM}\ plug\ /\ blind\ nut\ for\ blocking\ Viper^{TM}\ union\ or\ valve\ ports, 1\ pc.$	Accessories	х	x
6040.2360	Viper [™] Cap., IDxL 0.18x150 mm, SST	SST Viper TM capillary used from pump to pressure sensor as well as from pressure sensor to valve (A/B)	Spare Parts		х
6040.7158	pump piston seal tool, RoHS	Tool seal handling RS/SD pump / EASY-nLC TM series instruments	Accessories	х	х
6041.5112	CABLE KIT Thermo VALVE EASY-nLC [™] 1200	Cable Kit for Valve EASY-nLC TM 1200	Accessories		х
6041.5114	Grounding adapter for EASY-nLC TM 1200		Spare Parts		х
6790.0001	Thermo 1200 bar Valve 2-POS 6-PORT	Valve 2-Pos 6-Port 250μm, EASY-nLC [™] 1200	Spare Parts		х
G10-0035	High Pressure union 6-32 PEEK [™] , 1/32"	PEEK TM ZDV union (red) with fittings 0.76" length, 0.035 in. thru-port, for 1/32" OD tubing	Accessories	х	х
LC157	Fuses 110V/5A	Fuses for EASY-nLC TM (110V/5A) 2 pcs.	Spare Parts	x	х
LC158	Fuses 230V/2.5A	Fuses for EASY-nLC TM series systems(230V/2.5A) 2 pcs.	Spare Parts	x	x
LC160	Contact closure cable, Thermo Fisher	For EASY-nLC $^{\text{TM}}$ series systems to mass spectrometer connection, 1 pc.	Accessories	x	х
LC161	Contact closure cable, ABI / MDS / Sciex	For EASY-nLC TM series systems to mass spectrometer connection, 1 pc.	Accessories	х	х
LC162	Contact closure cable, Bruker / Agilent	For EASY-nLC $^{\text{TM}}$ series systems to mass spectrometer connection, 1 pc.	Accessories	х	х
LC163	Contact closure cable, Waters / Micromass	For EASY-nLC $^{\text{TM}}$ series systems to mass spectrometer connection, 1 pc.	Accessories	х	х
LC167	EASY-Spray [™] Source Temperature control upgrade kit	P-bus cable including LC devices 3.x	Accessories	x	х
LC182	Waste bottles	Waste bottles, 2 pcs.	Accessories	х	х
LC186	Solvent bottles	BlueCap bottles with lids 4 pcs.	Accessories	х	х
LC227	Valve stator mounting screws	Screws for mounting stator. Fits all valves. 2 pcs.	Spare parts	х	
LC228	Valve rotor (E3), for serial nos. V-010000 and above	Suitable for valve serial numbers V-010000 and above 1 pc.	Consumables and wear parts	x	
LC230	Low pressure solvent flow lines	Complete set of flow lines, Tee's and check valves needed to replace the low pressure solvent delivery and waste system on one pump. 1 pc.	Spare parts	Х	
LC232	Replacement filter discs for solvent filters	10 μm filter discs, 2pcs.	Consumables and wear parts	Х	х
LC233	Solvent-side check valve	Solvent-side check valve 1 pc.	Spare parts	Х	х
LC234	Waste-side check valve	Solvent-side check valve 1 pc.	Spare parts	х	х
LC235	Solvent filter kit	2 solvent filter holding capsules, $2 \times 10 \mu m$ filter discs, $2 BlueCap$ lids and fittings and flow lines to mount filter assemblies onto bottle lids $1 pc$.	Consumables and wear parts	Х	х
LC282	EASY-nLC [™] LCD screen	LCD screen Requires a service engineer for installation, 1 pc.	Spare Parts	х	х
LC301	Autosampler C, ASC	Requires a service engineer for installation. 1 pc.	Spare Parts	Х	х

Column C	LC302	Autosampler needle assembly EASY-nLC $^{\!TM}$ series systems ASC	Autosampler injection needle including all required fittings. For use with autosampler C (ASC). 1 pc.	Consumables and wear parts	х	х
Additional and set though 200 Additional and set all processing for the control of the con	LC303	Wash insert ASC and ASA	Wash insert for autosampler wash bottle. For use with autosampler C (ASC). 1 pc.	Accessories	х	Х
1-100	LC304	Autosampler wash bottle with lid, ASC sampler	Autosampler wash bottle with lid. For use with autosampler C (ASC). 1 pc.	Accessories	х	Х
1.0330 10.00 to 1	LC309	Autosampler vials with caps		Consumables and wear parts	х	Х
CLESS Cold Not ACAP role. prove colde, Contract Schore colde, LAN cold. Accounting Acc	LC310	Autosampler cooling module, ASC sampler	Requires a service engineer for installation 1 pc.	Spare Parts	х	Х
Value and Carlot 120 FF	LC350	EASY-nLC [™] 1000 Accessory kit	Complete Accessory for (re-) installation of an EASY-nLC™ 1000 system	Accessories	х	
Control Cont	LC351	Cable kit EASY-nLC	power cables, contact closure cable, LAN cable	Accessories	х	Х
16473 Copp 20 Jul. near/orgen** 28 Jul. near/orgen** ample top including fittings, 1 pc.	LC353			Spare Parts	x	
CLOPS Loop Opul, manyope** So pit, manyo	LC471	Loop 5 μL, nanoViper TM	$5~\mu L~nano Viper^{TM}$ sample loop including fittings, 1 pc.	Accessories	х	Х
ECSI Purisy N.S. 2000000, URBNIC Representations of the processor of	LC472	Loop 20 μL, nanoViper TM	20 μL nanoViper TM sample loop including fittings, 1 pc.	Accessories	х	Х
Recytimes a price of groups (1,000) Recytimes a price or groups (1,000) Recytime a price or groups (1,000) Recytim	LC475	Loop 50 μ L, nanoViper TM	$50~\mu\text{L}~\text{nanoViper}^{\text{TM}}$ sample loop including fittings, 1 pc.	Accessories	х	Х
Complete service engine for installations p.c. Source and pump beats reset p.c. Commander and wear parts X X X X X X X X X	LC501			Spare Parts	х	
LISSID For PROCESSED and Share, Literact. Pristing to pressure services, valve flow line. Flow line including fittings 1 pc. Consumables and wear parts. X LISSID Pressure services, valve flow line, A/W Pressure services, valve flow line, A/W LISSID Pressure services, valve flow line, A/W LISSID Pressure services, valve flow line, A/W LISSID Valve whit coasted stators and actuators Complete solve where services, valve flow line, A/W LISSID Valve below services, valve flow, A/W LISSID Valve below flow, and advance of flow flow flow of flow flow flow of flow flow	LC502	Pressure sensor		Spare Parts	x	
IC513 Pressure sensor, valve flow line, A/B Flow line including fittings 1 pc. Consumables and wear parts X	LC510		Pump piston seals 4 pcs. + 8 coated pump head screws	Consumables and wear parts	x	х
CC514 Pressure senor, valve flow line, 5 Flow line including fittings 1 p.C Consumables and wear parts X	LC512	Pump to pressure sensor flow line	Flow line including fittings 1 pc.	Consumables and wear parts	x	
Listing Valve with coated stator and actuator Complete valve module for E3 rotors. Spare Parts X X	LC513	Pressure sensor, valve flow line, A/B	Flow line including fittings 1 pc.	Consumables and wear parts	x	
Cube	LC514	Pressure sensor, valve flow line, S	Flow line including fittings 1 pc.	Consumables and wear parts	x	
LCS23 Valve blank stop / blind nut / blind plug for EASY-nLC TM 1000 Plug / blind nut for blocking valve ports, 1 pc. LCS25 Valve stator, coated, for EASY-nLC TM 1000 for serial nos. V-020000 and above Provalve serial numbers V-020000 and above 1 pc. LCS40 Flow sensor (V/8) Requires a service engineer for installation, 1 pc. LCS41 Flow Sensor Filter Set Flow Sensor Filter Set Filters and ferrules for LCS40 U.PRLC Flow Sensor Two filters and two ferrules LCS43 Flow line sensor B to mixing Tee Filters and ferrules for LCS40 U.PRLC Flow Sensor Two filters and two ferrules LCS40 Column out flow line Column out flow line Column out flow line and fittings 1 pc. Consumables and wear parts X X X LCS62 Waste line Waste line Waste line flow line and fittings 1 kit Consumables and wear parts X X X LCS63 Waste line Waste line Waste line flow line waste) 1 kit LCS64 Paump controller board, for serial nos. Po08800 and above. To be used with LCS01 and LCS02 for serial los. Po08800 and above. To be used with LCS01 and LCS02 for serial los. Po08800 and above. To be used with LCS01 and LCS02 for serial los. Po08800 and above. Dependence for installation, 1 pc. LCS77 Pump head for serial los. Po08800 and above. Dependence for installation, 1 pc. LCS81 Hard Disk Drive (+ PDD (SEQ) EASY-nLC TM 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. obsolute pc box LCS85 Pc BOX (Altom) EASY-nLC TM 1000 Altod disk with latest software image loaded, can be installed by user, 1 pc. obsolute pc box LCS86 Nard Disk Drive (+ PDD (Alam) EASY-nLC TM 1000 Single ASY-nLC TM 1000 Single Asy-nucle with PDD installed, no Pc. Spare Parts X X X Pump 1000 pc. LCS87-nLC TM 1000 Single Asy-nucle with PDD installed by user, 1 pc. discontinued pc box LCS86 Pump Controller board, EASY-nLC TM 1000 Single Asy-nucle with PDD installed by user, 1 pc. discontinued pc box A Requires a service engineer for installation, 1 pc. LCS87 Pump 1000 pc. LCS87-nLC TM 1000 Single Asy-nucle with PDD installed by us	LC519	Valve with coated stator and actuator		Spare Parts	x	
LCS26 Valve stator, coated, for EASY-ILC ^M 1000 for serial now. V-020000 and above 1 pc LCS40 Flow sensor (V/B) Requires a service engineer for installation, 1 pc. LCS41 Flow Sensor (V/B) Requires a service engineer for installation, 1 pc. LCS42 Flow Sensor Filter Set LCS43 Flow line sensor B to mixing Tee Includes fittings, 1 kt This kit DOES NOT include Tee (SC901) LCS40 Column out flow line Column out flow line Column out flow line and fittings 1 pc. Consumables and wear parts X X X LCS62 Waste in flow line Waste in flow line Waste line flow line and fittings 1 kt Consumables and wear parts X X X LCS63 Waste line Waste line flow line Waste line flow line wear and fittings (from W valve to waste) 1 kt LCS63 Waste line For serial nos. P.009800 to p. 0099999 Requires a service engineer for installation, 1 pc. LCS74 Pump bead for serial nos. P.009800 and above pump head (1 pc.), includes coated pump head screws (2 pcs) LCS81 Hard Disk Drive / HDD (SRC) EASY-ILC TM 1000 EASY-ILC TM 1000 EASY-ILC TM 1000 Hard disk with battes software image loaded, can be installed by user, 1 pc. Spare Parts X LCS85 PC BOX (Atom) EASY-ILC TM 1000 Hard disk with battes software image loaded, can be installed by user, 1 pc. Spare Parts X LCS86 Pump Controller board, AESY-ILC TM 1000 Hard disk with battes software image loaded, can be installed by user, 1 pc. Spare Parts X LCS86 Pump Controller board, EASY-ILC TM 1000 Hard disk with battes software image loaded, can be installed by user, 1 pc. Spare Parts X LCS86 Pump Controller board, EASY-ILC TM 1000 Hard disk with battes software image loaded, can be installed by user, 1 pc. Spare Parts X LCS86 Pump Controller board, EASY-ILC TM 1000 Hard disk with battes software image loaded, can be installed by user, 1 pc. Spare Parts X LCS86 Pump Controller board, EASY-ILC TM 1000 Hard disk with battes software image loaded, can be installed by user, 1 pc. Spare Parts X LCS87 Pump Somotories board, EASY-ILC TM 1000 Hard disk	LC522	Valve to flow sensor flowline	Flow line including fittings, nanoViper, 20 μmx 350 mm, 1 pc.	Spare parts	х	Х
LC540 Flow sensor (A/B) Requires a service engineer for installation, 1 pc. LC542 Flow Sensor Filter Set Filters and ferrules for LC540 UHPLC Flow Sensor Two filters and two ferrules LC543 Flow line sensor B to mixing Tee Includes fittings. 1 kit This kit DOCS NOT include Tee (C540) LC543 Flow line sensor B to mixing Tee Includes fittings. 1 kit This kit DOCS NOT include Tee (C500) LC560 Column out flow line Column out flow line and fittings 1 pc. Consumables and wear parts X X X LC560 Column out flow line Waste in flow line and fittings 1 kit Consumables and wear parts X X X LC563 Waste in flow line Waste line and fittings 1 kit Consumables and wear parts X X X LC563 Waste line Waste line and fittings (from W valve to waste) 1 kit Spare parts X X LC564 Flow Sensor R to mixing Tee Waste line and fittings from W valve to waste) 1 kit Spare parts X X LC565 Waste in flow line Waste line and fittings (from W valve to waste) 1 kit Spare parts X LC566 Flow Sensor R to mixing Tee Waste line and fittings 1 kit Consumables and wear parts X X X LC566 Waste in flow line Waste line and fittings 1 kit Consumables and wear parts X X X LC567 Pump head for serial nos. P.0009800 to P.0099999 Requires a service engineer for installation, 1 pc. LC577 Pump head for serial nos. P.0009800 and above pump head (1 pc.), includes coated pump head screws (2 pc.s) Spare Parts X X LC581 Hard Disk Drive / HDD (SRC) EASY-nIC ^{NM} 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. dossolete pc box obsolete pc box obsolet	LC523	Valve blank stop / blind nut / blind plug for EASY-nLC $^{\text{TM}}$ 1000	Plug / blind nut for blocking valve ports, 1 pc.	Accessories	x	
LC542 Flow Sensor Filter Set Filters and ferrules for LC540 UHPLC Flow Sensor Two filters and two ferrules Consumables and wear parts X X LC543 Flow line sensor B to mixing Tee Includes fittings. J kit This kit DOES NOT include Tee (SC901) Spare parts X X LC560 Column out flow line Column out flow line and fittings 1 pc. Consumables and wear parts X X LC562 Waste in flow line Waste line and fittings 1 kit Consumables and wear parts X X LC563 Waste line Waste line and fittings 1 kit Spare parts X X LC563 Foreial nos. P.0008800 to P.0099999 Requires a service engineer for installation, 1 pc. LC574 Foreial nos. P.0008800 and above pump head (1 pc.) includes coated pump head screws (2 pcs) Foreial nos. P.0008800 and above pump head (1 pc.) includes coated pump head screws (2 pcs) LC581 Hard Disk Drive / HDD (SRC) EASY-nLC TM 1000 EASY-nLC TM 1000 controller, Shipped with HDD installed, Requires a service engineer for installation, 1 pc. LC586 Hard Disk Drive / HDD (Atom) EASY-nLC TM 1000 EASY-nLC TM 1000 controller, Shipped with HDD installed, Requires a service engineer for installation, 1 pc. LC586 Hard Disk Drive / HDD (Atom) EASY-nLC TM 1000 EASY-nLC TM 1000 controller, Shipped with LC591 and LC592 Requires a service engineer for installation, 1 pc. LC586 Pump RAGO Spare Parts X LC587 Pump Controller board, EASY-nLC TM 1000 EASY-nLC TM 1000 controller, Shipped with LC591 and LC592 Spare Parts X LC589 Pump Controller board, EASY-nLC TM 1000 Shipped with LC591 to be used with LC591 and LC592 Spare Parts X LC590 Pump Controller board, EASY-nLC TM 1200 Shipped with LC591 to be used with LC591 and LC592 Spare Parts X LC590 Pump Short 1200 Spare Parts X LC590 P	LC526		For valve serial numbers V-020000 and above 1 pc	Spare parts	х	
Includes fittings.1 kit This kit DOES NOT include Tee (SC901) Spare parts X X X X X X X X X	LC540	Flow sensor (A/B)	Requires a service engineer for installation, 1 pc.	Spare Parts	x	Х
LC543 Flow line sensor is to mixing: lee This kit DOES NOT include Tee (SC901) Column out flow line Column out flow line Column out flow line and fittings 1 pc. Consumables and wear parts X X LC562 Waste lin flow line Waste lin' flow line and fittings 1 kit Consumables and wear parts X X X LC563 Waste line Waste line and fittings (from W valve to waste) 1 kit Spare parts X X LC574 Pump controller board, for serial nos. P.0009800 to P.0099999 Requires a service engineer for installation, 1 pc. LC577 Pump head for serial nos. P.0009800 and above pump head (1 pc.), includes coated pump head screws (2 pcs) Spare Parts X X X LC581 Hard Disk Drive / HDD (SBC) EASY-nLC™ 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. obsolete pc box LC586 Hard Disk Drive / HDD (Atom) EASY-nLC™ 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. LC586 Hard Disk Drive / HDD (Atom) EASY-nLC™ 1000 Spare Parts X LC587 Pump Controller board, for serial nos. P.0009800 and above Requires a service engineer for installation, 1 pc. LC586 Pump Controller board, EASY-nLC™ 1000 Shipped with LC591 and LC592 Requires a service engineer for installation on the local during piston seel pre-installation Requires a service engineer for installation on the local during piston seel pre-installation X X X X X X X X X X X X X	LC542	Flow Sensor Filter Set	Filters and ferrules for LC540 UHPLC Flow Sensor Two filters and two ferrules	Consumables and wear parts	х	
LC562 Waste in flow line Waste in' flow line and fittings 1 kit Consumables and wear parts X X LC563 Waste line Waste line Waste line and fittings (from W valve to waste) 1 kit Spare parts X LC574 Pump controller board, for serial nos. P-0009800 to P-0099999 Requires a service engineer for installation, 1 pc. LC577 Pump head for serial nos. P-0009800 and above pump head (1 pc.), includes coated pump head screws (2 pcs) Spare Parts X X X LC581 Hard Disk Drive / HDD (SBC) EASY-nLC ^{IM} 1000 Basty-nLC ^{IM} 1000 controller, Shipped with HDD installed, Requires a service engineer for installation, 1 pc. LC586 Hard Disk Drive / HDD (Atom) EASY-nLC ^{IM} 1000 Requires a service engineer for installation, 1 pc. LC586 Pump Controller board, EASY-nLC ^{IM} 1000 Shipped with LSS stick to set S/N. To be used with LC591 and LC592 Requires a service engineer for installation. 1 pc. Spare Parts X X X X X X X X X X X X X	LC543	Flow line sensor B to mixing Tee		Spare parts	х	Х
LC563 Waste line Waste line and fittings (from W valve to waste) 1 kit Spare parts X LC574 Pump controller board, for serial nos. P-0009800 to P-0099999 Requires a service engineer for installation, 1 pc. LC577 Pump head for serial nos. P-0009800 and above pump head (1 pc), includes coated pump head screws (2 pcs) LC577 Pump (SBC) EASY-nLC TM 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. obsolete pc box Spare Parts X LC581 Hard Disk Drive / HDD (SBC) EASY-nLC TM 1000 EASY-nLC TM 1000 controller, Shipped with HDD installed, Requires a service engineer for installation, 1 pc. LC586 Hard Disk Drive / HDD (Atom) EASY-nLC TM 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. obsolete pc box Ax LC586 Hard Disk Drive / HDD (Atom) EASY-nLC TM 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. discontinued pc box Spare Parts X LC586 Pump Controller board, EASY-nLC TM 1000 Spare Parts X LC590 Pump Controller board, EASY-nLC TM 1200 For serial nos. P-01000000 and above Requires a service engineer for installation. EASY-nLC TM 1200 pump including piston seal pre-installed Spare Parts X Spare Parts X	LC560	Column out flow line	Column out flow line and fittings 1 pc.	Consumables and wear parts	х	Х
LC574 Pump controller board, for serial nos. P-0099999 Requires a service engineer for installation, 1 pc.	LC562	Waste in flow line	Waste in' flow line and fittings 1 kit	Consumables and wear parts	х	Х
for serial nos. P-0009800 to P-0099999 Requires a service engineer for installation, 1 pc. LC577 Pump head for serial nos. P-0009800 and above pump head (1 pc), includes coated pump head screws (2 pcs) Spare Parts X X X LC581 Hard Disk Drive / HDD (SBC) EASY-nLC [™] 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. obsolete pc box LC585 PC BOX (Atom) EASY-nLC [™] 1000 Controller, Shipped with HDD installed, Requires a service engineer for installation, 1 pc. LC586 Hard Disk Drive / HDD (Atom) EASY-nLC [™] 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. Spare Parts X LC586 Hard Disk Drive / HDD (Atom) EASY-nLC [™] 1000 discontinued pc box LC590 Pump Controller board, EASY-nLC [™] 1200 shipped with US9 stick to set 5/N. To be used with LC591 and LC592 Spare Parts X Pump 18000 psi, EASY-nLC [™] 1200 EASY-nLC [™] 1200 pump including piston seal pre-installed	LC563	Waste line	Waste line and fittings (from W valve to waste) 1 kit	Spare parts	х	
LCS81 Hard Disk Drive / HDD (SBC) EASY-nLC TM 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. Obsolete pc box EASY-nLC TM 1000 controller, Shipped with HDD installed, Requires a service engineer for installation, 1 pc. LCS86 Hard Disk Drive / HDD (Atom) EASY-nLC TM 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. Spare Parts X LCS86 Hard Disk Drive / HDD (Atom) EASY-nLC TM 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. discontinued pc box LCS90 Pump Controller board, EASY-nLC TM 1000 Shipped with USB stick to set 5/N. To be used with LCS91 and LCS92 For serial nos. P-D100000 and above Requires a service engineer for installation. Pump 18000 psi, EASY-nLC TM 1200 EASY-nLC TM 1200 pump including piston seal pre-installed	LC574			Spare Parts	х	
LC585 PC BOX (Atom) EASY-nLC [™] 1000 EASY-nLC [™] 1000 controller, Shipped with HDD installed, Requires a service engineer for installation, 1 pc. LC586 Hard Disk Drive / HDD (Atom) EASY-nLC [™] 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. discontinued pc box LC590 Pump Controller board, EASY-nLC [™] 1200 shipped with USB stick to set 5/N. To be used with LC591 and LC592 for serial nos. P-01000000 and above Requires a service engineer for installation. X LC591 Pump 18000 psi, EASY-nLC [™] 1200 EASY-nLC [™] 1200 psi	LC577		pump head (1 pc), includes coated pump head screws (2 pcs)	Spare Parts	х	Х
Requires a service engineer for installation, 1 pc. LC586 Hard Disk Drive / HDD (Atom) EASY-nLC TM 1000 discontinued pc box LC590 Pump Controller board, EASY-nLC TM 1200 shipped with USB stick to set S/N. To be used with LC591 and LC592 Spare Parts X LC591 Pump 18000 psi, EASY-nLC TM 1200 EASY-nLC TM 1200 pump including piston seal pre-installed EASY-nLC TM 1200 pump including piston seal pre-installed	LC581	Hard Disk Drive / HDD (SBC) EASY-nLC TM 1000		Spare Parts	х	
LC586 Hard Disk Drive / HDD (Atom) EASY-nLC [™] 1000 Hard disk with latest software image loaded, can be installed by user, 1 pc. discontinued pc box Y Pump Controller board, EASY-nLC [™] 1200 shipped with USB stick to set s/N. To be used with LC591 and LC592 For serial nos. P-0100000 and above Requires a service engineer for installation. EASY-nLC [™] 1200 pump 18000 psi, EASY-nLC [™] 1200 EASY-nLC [™] 1200 pump including piston seal pre-installed Space Parts X	LC585	PC BOX (Atom) EASY-nLC [™] 1000		Spare Parts	х	
for serial nos. P-0100000 and above Requires a service engineer for installation. Y Pump 18000 psi, EASY-nLC [™] 1200 EASY-nLC [™] 1200 pump including piston seal pre-installed Space Parts X	LC586	Hard Disk Drive / HDD (Atom) EASY-nLC [™] 1000	Hard disk with latest software image loaded, can be installed by user, 1 pc.	Spare Parts	х	
Pump 18000 psi, EASY-nLC [™] 1200 EASY-nLC [™] 1200 pump including piston seal pre-installed Space Botts	LC590			Spare Parts		Х
	LC591	Pump 18000 psi, EASY-nLC [™] 1200	EASY-nLC [™] 1200 pump including piston seal pre-installed	Spare Parts		Х

LC592	Pressure sensor 18000 psi for serial nos. P-0100000 and above	Pressure sensor 18kpsi compatible with UHPLC pump LC591 with white connector, Requires a service engineer for installation, 1 pc.	Spare Parts		х
LC593	low pressure flowlines EASY-nLC [™] 1200	Complete set of low pressure including PTFE flow lines, Tee's and check valves needed to replace the low pressure solvent delivery and waste system on one pump. 1 pc.	Spare Parts		х
LC594	INLET CAPILLARY, SHORT EASY-nLC [™] 1200	Low pressure flow line valve, EASY-nLC [™] 1200, 15 cm long	Spare Parts		Х
LC595	INLET CAPILLARY, LONG EASY-nLC TM 1200	Low pressure waste line, EASY-nLC [™] 1200, 50 cm long	Spare Parts		Х
LC596	PC BOX (Atom) EASY-nLC [™] 1200	EASY-nLC [™] 1200 controller, Shipped with HDD installed, Requires a service engineer for installation, 1 pc.	Spare Parts		Х
LC597	Hard Disk Drive / HDD (Atom) EASY-nLC TM 1200	Hard disk with latest software image loaded, can be installed by user, 1 pc. discontinued pc box	Spare Parts		Х
LC598	ACCESSORY KIT, EASY-nLC 1200	Complete Accessory for (re-) installation of an EASY-nLC [™] 1200 system	Accessories		Х
LC603	PC Box (EBC) EASY-nLC 1000	EASY-nLC TM 1000 controller, Shipped with HDD installed - EBC Requires a service engineer for installation, 1 pc.	Spare Parts	х	
LC604	Hard Disk Drive / HDD (EBC) EASY-nLC TM 1000	Hard disk with latest software image loaded, can be installed by user, 1 pc.	Spare Parts	Х	
LC607	PC Box (EBC) EASY-nLC 1200	EASY- nLC^{TM} 1200 controller, Shipped with HDD installed - EBC Requires a service engineer for installation, 1 pc.	Spare Parts		Х
LC608	Hard Disk Drive / HDD (EBC) EASY-nLC [™] 1200	Hard disk with latest software image loaded, can be installed by user, 1 pc.	Spare Parts		x
LC722	Tryptic digest BSA standard	A complex mixture of peptides used for making performance test for the Easy-nLC TM product line. It is produced by Trypsin digestion of Bovine Serum Albumin (BSA) that was reduced and alkylated with lodoacetamide (CAM modified). This peptide mixture can be used to test a Matrix-Assisted Laser Desorption/ionization Time-OF-Flight (MALDI-TOF) or Electrospray Ionization (ESI) mass spectrometer (Orbitrap, TOF, Q-TOF or Ion Trap). 500 pmol	Consumables and wear parts	х	х
SC600	HPLC-to-Column connector	Zero-dead-volume union (1/32" OD tubing) + 10 x sleeves (same as in SC603), 1 kit	Consumables and wear parts	Х	Х
SC603	Sleeves (2cm, 1/32 OD) for 360 μm OD fused silica	30 x sleeve (4cm, 1/32 OD) for 360 μm OD fused silica	Consumables and wear parts	х	Х
SC901	A/B mixing tee & Venting Tee	Nanoliter-dead-volume tee (1/16" OD tubing), 1 kit	Accessories	х	Х
SC903	Sleeves 1/32" for 280 μm OD	10 x sleeve (4cm, 1/32 OD) for 280 μm OD fused silica	Consumables and wear parts	х	Х