


Thermo Scientific NanoDrop Spectrophotometers

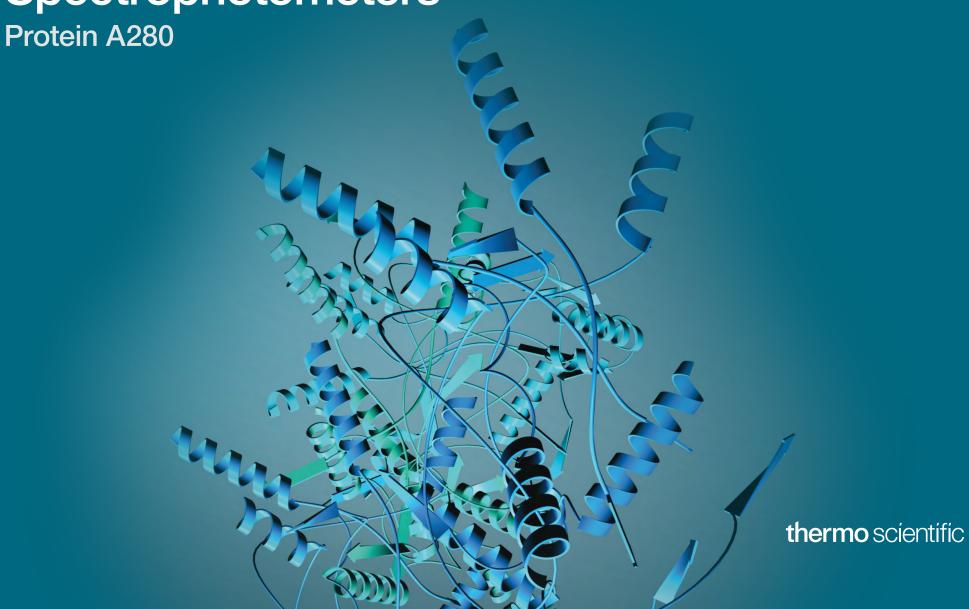

Contents

Introduction	.3
Sample retention technology	.4
Best practices	.5
Cleaning	.5
Reconditioning	.5
Pedestal assessment	.5
Instrument orientation	.6
Cuvette orientation	.6
Sampling technique	.7
Measurements	.8
Blank measurements	.8
Sample Measurements	.9
Calculations	.10
Absorptivity	.10
Published extinction coefficients	.11
Calculations	.13
Sample type options	.13
Pathlength & concentration	.15
Calibration	.16
Performance verification	.16
Standard vs control	.17

rc	publeshooting
	Common reagents
	Unusual spectra
	Reproducibility
	Instrument related issues
	Signal errors
Α	Qs2
e	chnical support2

Introduction

This booklet is meant to provide basic protein measurement support information for direct A280 methods relevant to Thermo Scientific™ NanoDrop™ One/One^c, Eight, Lite Plus Spectrophotometers.


Please refer to the model-specific user manual for more detailed instrument and software featurerelated information.

Separate booklets for nucleic acid and protein colorimetric methods are also available.



Introduction

Sample retention technology

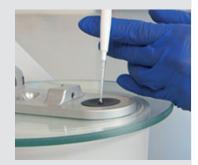

 \bullet Pipette 1 – 2 μL sample directly onto the measurement pedestal.



- Lower the instrument arm and tap **Measure** to initiate a spectral measurement. When turned on, Auto-Measure starts a measurement immediately after the instrument arm is lowered (Not available on the NanoDrop Lite Plus).
- Surface tension is used to hold samples in place between two optical fibers.
- Light from a xenon flashlamp passes through the top optical fiber down through the liquid column and is detected by the internal spectrometer.



• When the measurement is complete, raise the instrument arm and wipe the sample from both the upper and lower pedestals using a dry, lint-free laboratory wipe.

Using this technology, NanoDrop Spectrophotometers have the capability to measure samples between 50 and 200 times more concentrated than samples measured using a standard 1 cm cuvette.

The Protein A280 method is applicable to purified proteins that contain Trp, Tyr residues or Cys-Cys disulphide bonds and exhibit absorbance at 280 nm. This method does not require generation of a standard curve and is ready for protein sample quantitation at software startup.

Colorimetric assays such as BCA, Pierce 660 nm, Bradford, and Lowry require standard curves and are more commonly used for uncharacterized protein solutions and cell lysates.

Best practices

Cleaning



- An initial cleaning of both measurement surfaces with dH₂O is recommended prior to making the blank measurement. Do NOT use a squirt or spray bottle to apply water or any other liquid to the surface of the instrument.
- Between measurements: Wipe the sample from both the upper and lower pedestals with a clean, dry, lint-free lab wipe.
- A final cleaning of both measurement surfaces with dH₂O is recommended after the last sample measurement. Do NOT use a squirt or spray bottle to apply water or any other liquid to the surface of the instrument.
- Additional cleaning: Use 3 μL of HCl instead of the dH₂O for cleaning when samples have dried on the pedestal. Follow with a 3 μL aliquot of dH₂O.
- Detergents and isopropyl alcohol are NOT recommended cleaning agents as they may uncondition
 the pedestal measurement surfaces. If a solution containing detergents or alcohol is used, follow with
 3 5 μL of dH₂O.

Reconditioning

Use the NanoDrop Pedestal Reconditioning Compound (PR-1) as a rapid means of reconditioning the pedestals when the hydrophobic surface properties have been compromised and liquid columns break during measurement.

- 1. Open the vial containing PR-1 and use the applicator provided in the kit to remove a pin-head sized amount of the compound.
- 2. Apply a very thin, even layer of PR-1 to the flat surface of the upper and lower pedestals. Wait 30 seconds for the PR-1 to dry.
- 3. Fold a clean, dry laboratory wipe into quarters and remove the PR-1 by rubbing the surface of the upper and lower pedestals until no additional dark compound residue shows on the lab wipe.

Pedestal assessment



Droplet flattens on unconditioned pedetal



Droplet "beads up" on properly conditioned pedestal

To check the effectiveness of the reconditioning, pipet a 1 μ L aliquot of dH₂O onto the lower measurement pedestal and visually verify that the water "beads up."

Best practices

Instrument orientation

Angle the instrument for optimal pipetting.






Shown here is the right-handed orientation for the NanoDrop One/One^c (the left-handed orientation is equally viable if preferred) and a close-up view of the NanoDrop Eight.






Position the magnetic pipette guide in the right- or left-handed orientation.

Cuvette orientation (NanoDrop One^o only)

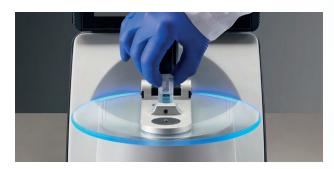

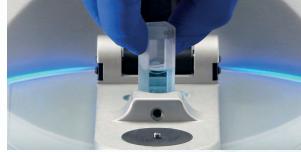

Use etched arrow as light path guide when inserting quartz or masked plastic cuvette.

Tip: Locate instrument away from air currents and exhaust fans.

Best practices

Sampling technique

Volume requirement: Use adequate sample volume to ensure good column formation.

Tip: Always use 2 μL samples when measuring protein samples to ensure proper column formation. Surfactants and other components routinely used in protein buffers may reduce the surface tension properties of the liquid.

Pipettor selection: Use calibrated pipettor with well-fitting tips. It is best to use a precision pipettor $(0-2~\mu\text{L})$ with low-retention, precision tips to ensure that a sufficient sample $(2~\mu\text{L})$ is delivered for optimal column formation.

Tip: To avoid evaporation errors, it is essential to use an eight-channel pipettor to **simultaneously** load samples when using two or more pedestal positions on the NanoDrop Eight Spectrophotometer.

Sample aliquots: Always use fresh tips and fresh aliquots for every measurement.

Tip: Repeated measurements on the same sample aliquot will result in evaporation, yielding increasing concentrations and/or column breakage.

Sample homogeneity: Highly concentrated nucleic acid samples require careful attention to ensure homogeneity before sampling.

Tip: Non-reproducible results observed when making small volume measurements are a good indicator that the sample is not fully in solution or is not homogenous.

Tip: It may be necessary to heat and/or lightly vortex samples prior to sampling to ensure homogeneity.

Sample preparation: Ensure sample isolation procedure is optimized and sample is purified prior to measurement. Any molecule with absorbance at 280 nm will contribute to the total absorbance used to calculate sample concentrations. Triton X-100 and NP-9 are two examples of components found in common buffers that may contribute to the total absorbance values at 280 nm.

Measurements


Blank measurements

Pre-assessment of buffer compatibility with direct A280 measurements:


- Many buffers commonly used with protein samples contain components with significant absorbance in the UV region. Proteins in these types of buffers may not be suitable for direct quantitation using the A280 method.
- Proteins suspended in RIPA buffers may not be suitable for measurement using the A280 application. It is recommended that a
 colorimetric assay such as Pierce 660 nm be used for proteins suspended in RIPA buffers. Refer to the reagent manufacturer for
 more information regarding buffer compatibility.

Follow the steps below to determine if your buffer exhibits significant absorbance in the region of interest:

- 1. Perform the Cleaning and Reconditioning procedures outlined in the **Best Practices** section on page 5.
- 2. Open the A280 application. Load an aliquot of dH2O onto the lower pedestal and lower the instrument arm.
- 3. Click **Blank**. After the measurement is complete, use a dry, lint-free lab wipe to remove the water from both the top and bottom pedestal surfaces.
- 4. Pipette an aliquot of the sample buffer onto the pedestal, lower the arm and click **Measure**. The result should be a spectrum that varies no more than 0.04 absorbance (10 mm absorbance equivalent) from the baseline at 280 nm. If not, consider using a colorimetric method to quantitate the protein samples.

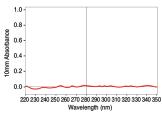

Example spectrum of buffer suitable for A280 protein quantitation



Example spectrum of buffer unsuitable for use with A280 protein quantitation

- 5. If the buffer is compatible with the A280 method, load a fresh aliquot of the buffer onto the lower pedestal and lower the instrument arm. Click **Blank**.
- 6. After the measurement is complete, use a dry, lint-free lab wipe to remove the buffer from both the top and bottom pedestal surfaces.

Tip: Although it is not necessary to blank between each sample, it is recommended that a new blank be taken every 30 minutes when measuring many samples.

Measurements

Sample Measurements

1. Choose the appropriate sample type as described below:

Sample type option	Extinction coefficient	
BSA	6.67	A Committee of the
IgG	13.7	N 10 7532 N
Lysozyme	24.6	
1 Abs = 1 mg/mL	Default general reference setting	
E1%	User-entered mass extinction coefficient	0
E and MW	User-entered molar extinction coefficient and molecular weight	Al. 6.

Refer to Sample Types Options in the Calculations section on pages 13 and 14 for more information.


2. Pipette an aliquot of the protein sample onto the lower pedestal and lower the instrument arm. Click **Measure**.


Tip: If measuring more than one sample at a time on the NanoDrop Eight Spectrophotometer, it is important to use a multi-channel pipettor to deliver the sample aliquots.

- 3. After the measurement is complete, use a dry, lint-free lab wipe to remove the sample from both the top and bottom pedestal surfaces.
- 4. Change pipette tips for the next measurement.

Tip: If measuring multiple replicates of the same sample, it is important to use a fresh aliquot for every measurement to ensure accurate results.

5. Review spectral image to assess sample quality.

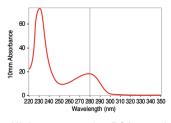



High concentration BSA sample

Low concentration BSA sample

Tip: Refer to the Troubleshooting section on page 18 for more information.

Absorptivity

The information in this section is a summary of the information presented in the Thermo Scientific Pierce products technical support bulletin # TR0006.2. Please refer to **www.piercenet.com** for additional information or to reach Pierce technical support.

	$A = \epsilon * b * c$		
	A is the absorbance value (A)		
Beer's Law states that molar absorptivity is constant (and the absorbance is proportional to concentration) for a given substance dissolved in	• ε is the wavelength-dependent molar absorptivity coefficient (or extinction coefficient) with units of liter/mol-cm		
a given solute and measured at a given wavelength.	• b is the path length in centimeters		
	c is the analyte concentration in moles/liter or molarity (M)		
	c = A / ε b		
Solving the expression of Beer's Law for concentration yields the following equation:	Dividing the measured absorbance of a protein solution by the product of the molar extinction coefficient and the path length yields the molar concentration of the protein solution. Refer to the Published Extinction Coefficients section on page 11 for additional information regarding molar vs. mass concentration values.		
The molar absorption coefficient of a peptide or	At 280 nm, this value is approximated by the weighted sum of the 280 nm molar absorption coefficients of the three constituent amino acids, as described in the following equation:		
protein is related to its tryptophan (W), tyrosin	$\varepsilon = (nW \times 5500) + (nY \times 1490) + (nC \times 125)$		
(Y) and cysteine (C) amino acid composition.	• n is the number of each residue		
	Stated values are the amino acid molar absorptivities at 280 nm		

Published extinction coefficients

Absorption coefficients (i.e., extinction coefficients) for many proteins have been compiled from the literature and reported in various handbooks. These values provide sufficient accuracy for most routine laboratory applications that require an assessment of protein concentration. Most sources report extinction coefficients for proteins measured at or near a wavelength of 280 nm in phosphate or other physiologic buffer.

Published Values

- Some resources provide coefficient values for specific proteins as the wavelength-dependent molar absorptivity coefficient (e or extinction coefficient) with units of M⁻¹cm⁻¹.
- Some resources provide coefficient values for specific proteins as 1% (= 1 g/100 mL) solutions measured in a 1 cm cuvette. These values can be understood as percent solution extinction coefficients (ε1%) having units of (g/100 mL)⁻¹cm⁻¹ instead of M⁻¹cm⁻¹.
- Still other sources provide protein absorbance values for 0.1% (i.e., 1 mg/mL) solutions, as this unit of measure is more convenient and common for protein work than percent solution.

Tip: The variation in reporting style underscores the importance of carefully reading stated values to be sure that the unit of measure is understood and applied correctly. Additional information is available in bulletin # TR0006.2 at **www.piercenet.com**.

Published extinction coefficients

Conversions

• The relationship between molar extinction coefficient (ε molar) and percent extinction coefficient (ε1%) is as follows:

$$(\epsilon_{molar})^*$$
 10 = $(\epsilon 1\%)$ × (molecular weight of protein)

Example: Assume you want to determine the ε 1% for a protein whose molar extinction coefficient is 43,824 M⁻¹cm⁻¹ and a molecular weight of 66,400 daltons. To determine the ε 1% for this protein, rearrange the above equation as follows:

$$\epsilon 1\% = (\epsilon_{molar}^{} *10) / (MW)$$

 $\epsilon 1\% = (43,824*10) / (66,400 daltons)$
 $\epsilon 1\% = 6.6$

• To report concentrations in terms of mg/mL, an adjustment factor of 10 is used when using percent solution extinction coefficients. To convert from g/100 mL to mg/mL.

```
(A / \epsilon 1\%) *10 = concentration in mg/mL
```

Example: Assume you obtain an 280 nm absorbance reading of 5.8A for a protein sample relative to your reference. To determine the calculated concentration of your sample (mg/mL), refer to the equation below:

$$C_{mg/mL} = (A/ \epsilon1\%) \times 10$$

 $C_{mg/mL} = (5.8/6.6) \times 10$
 $C_{mg/mL} = 8.79 \text{ mg/mL}$

Tip: The NanoDrop Software automatically includes the factor of 10 when reporting protein concentrations. The information presented above is for explanation purposes only.



Sample type options

There are six sample types (options) available for purified protein analysis and concentration measurement using the A280 application on the NanoDrop models specified at the beginning of this guide. A description of each sample type is given below:

Representative sample types

BSA

Protein concentrations are calculated using the mass extinction coefficient of 6.7 at 280 nm for a 1% (i.e., 10 mg/mL) Bovine Serum Albumin solution.

 Assuming a MW = 66,400 daltons, the molar extinction coefficient at 280 nm for BSA is approximately 43,824 M⁻¹cm⁻¹.

IgG

Protein concentrations are calculated using the mass extinction coefficient of 13.7 at 280 nm for a 1% (i.e., 10 mg/mL) IgG solution.

- Most mammalian antibodies (i.e., immunoglobulins) have protein extinction coefficients (percent) in the range of 12 to 15.
- For a typical IgG with MW = 150,000 daltons, this value corresponds to a molar extinction coefficient (ε) equal to 210,000 M⁻¹cm⁻¹.

Lysozyme

Protein concentrations are calculated using the mass extinction coefficient of 26.4 at 280 nm for a 1% (i.e., 10 mg/mL) Lysozyme solution.

• Molar extinction coefficient for egg white lysozyme ranges from 36,000 to 39,000 M⁻¹cm⁻¹.

Sample type options

Other sample types

1 Abs = 1 mg/ml

A general reference setting based on a 0.1% (i.e., 1 mg/mL) protein solution producing an Absorbance at 280 nm of 1.0 A (where the pathlength is 10 mm or 1 cm).

- Assume ε1% = 10 if no extinction coefficient information exists for a protein or protein mixture of interest and a rough estimate of protein concentration is required for a solution that has no other interfering substances.
- Most protein extinction coefficients (ε1%) range from 4.0 to 24.0. Although any given protein can vary significantly from ε1% = 10, the average for a mixture of many different proteins will likely be approximately 10.

Tip: This option is useful when measuring a protein solution for which no absorptivity information is available.

Other protein (ϵ + MW)

The relationship between molar extinction coefficient (ϵ molar) and percent extinction coefficient ϵ percent) is as follows:

(ϵ molar) 10 = (ϵ percent) × (molecular weight of protein).

- Although the label of the field where one enters the extinction coefficient differs between NanoDrop models, e.g., ε /1000 or ε (x1000), the value enteredwould be the same. For example, for a protein with a molar extinction coefficient of 210,000 M⁻¹cm⁻¹, enter 210 in the ε window for all model types.
- Enter the molecular weight in kilodaltons in the MW (kDa) field.

Tip: Use this option when the molar extinction coeffificient (M⁻¹cm⁻¹) and molecular weight are known.

Other protein (£1%)


 Enter the mass extinction coefficient (L gm⁻¹cm⁻¹) for a 10 mg/mL (ε1%) solution of the respective reference protein.

Pathlength & concentration

NanoDrop instrument pedestal measurements utilize pathlengths of 1.0 mm to 0.03 mm (model dependent.)

As the pathlength gets shorter, the ability to measure higher concentrations without saturating the internal detector increases. Although the upper detection limit of the internal spectrometer is ~ 1.5 Absorbance units, the NanoDrop sample retention technology allows for the use of shorter pathlengths, thereby extending the absorbance range of the instrument.

The graphic below illustrates how utilizing pathlengths less than the standard 10 mm (1 cm) cuvette pathlength enables higher concentrations of samples to be measured without making sample dilutions.

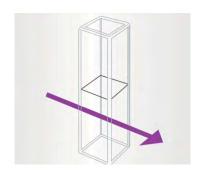

10 mm pathlength max concentration = ~ 2 mg/mL BSA 10 mm pathlength max Abs value = 1.5



1 mm pathlength max concentration = ~ 20 mg/mL BSA Equivalent to max Abs value of 15 when normalized to a 10 mm pathlength



0.2 mm pathlength max
concentration = ~ 100 mg/mL BSA
Equivalent to max Abs value of
75 when normalized to a 10 mm
pathlength

The table below lists the BSA detection limits** specific to each model.

Model	Absorbance limits (10 mm equivalent)	Detection limits for BSA**	Typical reproducibility (min 96 replicates) (SD=mg/ml; CV=%)
Thermo Scientific NanoDrop One/One ^c Spectrophotometer	0 to 550	.006* mg/mL to 820 mg/mL	±0.10 mg/mL (for 0.10-10 mg/mL samples) ±2% for samples >10 mg/mL
Thermo Scientific NanoDrop Eight Spectrophotometer	0.04 to 200	0.06 mg/mL to 300 mg/mL	±0.10 mg/mL (for 0.10-10 mg/mL samples) ±2% for samples >10 mg/mL
Thermo Scientific NanoDrop Lite Plus Spectrophotometer	0.04 to 30	0.06 mg/mL to 45 mg/mL	±0.10 mg/mL (for 0.10-10 mg/mL samples) ±2% for samples >10 mg/mL

^{*} Denotes lower detection limit when using 10 mm path cuvette.

^{**} The detection limits will vary based upon the extinction coefficients associated for specific proteins.

Calibration

Performance verification

All NanoDrop Spectrophotometers include a diagnostic application which allows the user to run a Performance Verification procedure to confirm that the instrument is working within specifications.

Wavelength calibration	 Wavelength calibrations using standard reference lines in the xenon flashlamp spectrum are automatically performed within the operating software.
(automatic)	 This verification ensures wavelength accuracy and does not require any action by the user.
Pathlength verification	 Use PV-1 in conjunction with the Performance Verification diagnostic to verify that the pathlengths are within specification.
(user-performed)	The pathlengths used to make measurements are the same across all
	wavelengths. Therefore, when pathlengths are verified at one wavelength, the verification is valid for the entire measured spectrum.
Performance Verification Solution	 PV-1 is a standard manufactured exclusively for use with NanoDrop Spectrophotometers and is available from Thermo Fisher Scientific and its distributors.
	 The PV-8 Performance Verification Kit (used for the NanoDrop Eight Spectrophotometer calibration check procedure) includes 2 PV-1 vials as well as 8-well PCR strip tubes.
	Tip: It is good practice to check the instrument's performance every six months with a new vial of NanoDrop performance verification Solution.

Calibration

Standard vs control

A "standard" is generally accepted as a solution of a **known concentration** that is used to calibrate or certify that an instrument is working within acceptable, pre-defined guidelines.

- The NanoDrop PV-1 Perfomance Verification solution is the only acceptable standard for use with the NanoDrop instrument Performance Verification diagnostic available within the operating software.
- The term "standard" also refers to protein solutions of a known concentration used to define a standard curve. These standards are not appropriate to assess NanoDrop instrument performance.


A "control" is a solution that produces an expected result within a **specific range** if the "system" is working as expected. The definition of system would include the instrument, protocols being used, techniques employed by the user and the solution utilized as the control.

- A 2 µg/mL Bovine Serum Albumin solution is a routine laboratory control used to monitor the reproducibility and values obtained from day to day use.
- Controls are valid to use as long as the instrument is calibrated and the control product itself is within the expected concentration range stated in the manufacturer's specifications.

Tip: Ensure all controls are stored as recommend by the manufacturer. Do not use controls past the stated expiration date.


Common reagents

When troubleshooting sample measurements, it is important to utilize the sample spectrum as a primary guide.

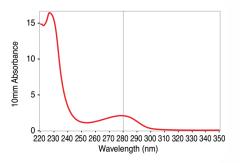


Typical Protein Spectrum at 280 nm (BSA in PBS)

Below are several examples of reagents commonly used with proteins with absorbance in the 220–350 nm range.

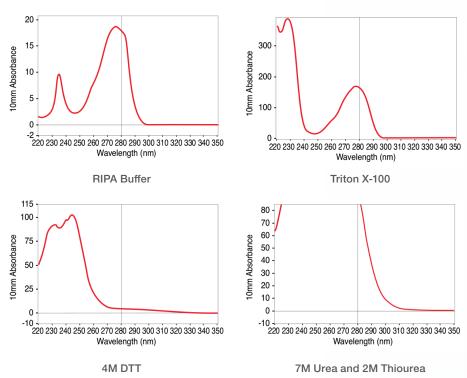


Unusual spectra

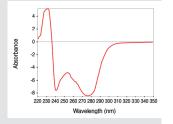

Negative values associated with some spectra indicate that either the pedestals were very dirty when the blank measurement was made or that a sample was used to make a blank or reblank measurement.

Suggestion:


Clean pedestal and measure new blank.

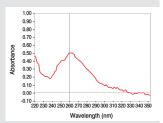

A ragged appearance throughout a spectrum may indicate a bad blank.

Suggestion:


Clean pedestal and measure new blank.

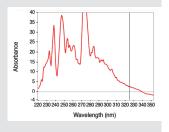

A jagged appearance throughout a spectrum may indicate a broken column.

Suggestions:

Clean and recondition both measurement surfaces, then measure a new blank. Increase sample volume to ensure proper column formation.

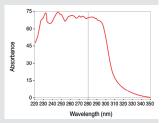

A jagged appearance at the top of the 280 nm peak most likely indicates detector saturation due to a highly concentrated sample.

Suggestions:

In cases like these, the data will be erroneous and should not be used for downstream work. Dilute the sample and remeasure.

Reproducibility

Non-reproducible results are usually due to issues with sample non-homogeneity, blanking on a dirty pedestal, using the same aliquot for multiple measurements, or column breakage.

Sample heterogeneity	 Sampling from non-homogeneous solutions, particularly when using small volumes, may result in significant measurement deviation in the generated data.
Dirty pedestal	 Clean and recondition the pedestal surfaces prior to the start of the measurement session.
	 Follow the suggestions in the Blank Measurements section on page 8, prior to making sample measurements.
Multiple measurements	Use fresh aliquots for each pedestal measurement. Tip: Multiple measurements of the same aliquot may result in evaporation and increased sample concentration values.
Column breakage	 Visually check that a column is intact after the completion of the measurement. If not, refer to the Instrument Related Issues section for guidance.

Reproducibility

Concentrations not within expected range

• Ensure samples fall within the linear detection range of the instrument.

Tip: Refer to the table of model-specific detection limits on page 15 for guidance.

- Ensure sample solution is homogeneous by gentle vortexing, as appropriate.
- Confirm that the reference (blank) solution and sample solvent are the same material.
- Clean and recondition the pedestal surfaces prior to the start of the measurement session.
- Ensure appropriate sample type is selected, as concentration calculations utilize constants specific to each sample type.

Instrument related issues

Column breakage

• Ensure pedestal surfaces are properly conditioned.

Tip: When a pedestal becomes unconditioned, sample droplets applied to the bottom pedestal will "flatten out" and cover the entire pedestal surface rather than "bead up." Refer to the Reconditioning instructions under the Best Practices section on page 5.

- Ensure sufficient volume is loaded onto the pedestal.
- Use a larger volume (1.5 2 μL) for each measurement.
- Use a calibrated small volume pipettor to deliver the sample to the pedestal.
- Ensure instrument is not located near a vent or other source of air flow.
- Ensure measurements are made immediately after pipetting samples onto the pedestal, as delays may compromise accuracy.
- If an error message indicating possible column breakage is displayed and the
 user visually confirms that the liquid column is forming, perform a calibration
 check. If the instrument is out of calibration, contact **Technical Support**.
 Outside of the US and Canada, please contact your local NanoDrop products
 distributor.

Signal errors

Some error messages are triggered when little to no light reaches the detector during initialization or a measurement.

- Refer to the cleaning directions under the **Best Practices** section on page 5.
- Run the Intensity Check diagnostic. Refer to the model-specific user guide for additional information.



FAQs

Q: Can I quantify proteins using methods other than the A280 application on NanoDrop Spectrophotometers?

A: Yes. Other options include measuring peptides at 205 nm and a Proteins and Labels module for labeled antibodies and other protein incorporating fluorescent labels or intrinsic fluorescence. In addition, colorimetric assays such as the BCA, Bradford, Modified Lowry and Pierce 660 nm Protein assay are easy and quick to run. Custom methods may also be set up via the PC software.

Q: I am using a colorimetric method (e.g., Bradford, BCA, etc.) to determine my protein concentration. Can I measure my sample using the A280 application on NanoDrop Spectrophotometers?

A: Yes. The A280 application is most applicable to purified proteins. Colorimetric assays such as BCA, Pierce 660 nm, Bradford, and Lowry are generally used for uncharacterized protein solutions and cell lysates. If you are using a colorimetric assay now, it is recommended that you continue to do so.

Q: What are the sample size requirements when using NanoDrop Spectrophotometers?

A: We recommend using a 2 µL sample size for pedestal-based protein measurements. Proteins and/or protein buffers may alter the surface tension properties of the solution and using the larger sample size is recommended to ensure proper column formation.

Q: What are the protein detection limits?

A: The detection limits vary depending on the model and the protein type being measured. The table below presents the limits by model for Bovine Serum Albumin with a mass extinction coefficient of 6.7 at 280 nm for a 1% (10 mg/mL) solution.

Model	Detection limits for dsDNA
Thermo Scientific NanoDrop One/One ^c Spectrophotometer	.006* mg/mL to 820 mg/mL
Thermo Scientific NanoDrop Eight Spectrophotometer	0.06 mg/mL to 300 mg/mL
Thermo Scientific NanoDrop Lite Plus Spectrophotometer	0.06 mg/mL to 45 mg/mL

^{*} Denotes lower detection limit when using 10 mm path cuvette.

Q: What if my samples are less concentrated than the above indicated lower detection limits?

A: Fluorescent dyes can be used in conjunction with the NanoDrop 3300 Fluorospectrometer to detect protein samples less concentrated than the limits indicated in the table on page 24.

Q: Is simply wiping the pedestal surface enough to prevent carryover?

A: Yes. The highly polished quartz and stainless steel surfaces of the sample retention system are resistant to sample adherence, making the use of dry, lint-free lab wipes very effective in removing the sample.

FAQs

Q: How do I keep my sample from flattening out on the measurement pedestal?

A: Use the NanoDrop PR-1 reconditioning compound as a rapid means of reconditioning the pedestals when the surface properties have been compromised and liquid columns break during measurement. PR-1 kits are available through Thermo Fisher Scientific or your local distributor.

Q: What is the cause of negative absorbance values?

A: A blank measurement was made either using a solution with more absorbance than the sample of interest or on a dirty pedestal. Clean the pedestal and make a new blank measurement with a fresh aliquot of the appropriate buffer.

Q: What sort of reproducibility should I expect with NanoDrop Spectrophotometers?

A: Typically within 3% at the 1 mm pathlength.

Q: How do I check the accuracy of NanoDrop Spectrophotometers?

A: NanoDrop PV-1 Performance Verification Solution should be used with the Performance Verification diagnostic in the instrument software. PV-1 is a proprietary potassium nitrate / nicotinic acid reference solution for testing the accuracy of NanoDrop One/One^c, Eight, and Lite Plus spectrophotometers.

Q: How do I calibrate NanoDrop Spectrophotometers?

A: The Performance Verification diagnostic allows the user to confirm that the instrument is performing within specifications. If the instrument requires recalibration, contact **Technical Support**. Outside of the US and Canada, please contact your local NanoDrop products distributor.

Q: Where is the data stored?

A: Data is stored locally on the instrument (NanoDrop Lite Plus and NanoDrop One/One^c) or on the PC software database (NanoDrop One/One^c and NanoDrop Eight).

Q: Is the flash lamp continuously on, or is it on only when performing a measurement?

A: The lamp is on only during measurements.

Q: Are there solvent restrictions?

A: Yes. Do not use hydrofluoric acid on the pedestal as it may etch the quartz optical fiber. Most other laboratory solvents typically used in life science labs, including dilute acids, are compatible with the pedestal as long as they are immediately wiped off upon the completion of the measurement.

Tip: The use of volatile solvents for sample measurement may result in erroneous data due to the rapid evaporation of the $1 - 2 \mu L$ sample volume.

Technical support

For additional assistance, please contact us at **1.877.724.7690** or send an email to **nanodrop@thermofisher.com**. The Thermo Scientific NanoDrop Product Technical Support Team is available between 9am and 5pm, EST.

For technical support outside of the US and Canada, please contact your local Thermo Scientific NanoDrop products distributor.

Additional technical information is available at **www.nanodrop.com**.

Thermo Fisher Scientific | NanoDrop Products 3411 Silverside Road | Bancroft Building Wilmington, DE 19810 U.S.A.
Toll-free in US and Canada: 1.877.724.7690

Phone: 1.302.479.7707 Fax: 1.302.792.7155

E-mail: nanodrop@thermofisher.com

www.nanodrop.com





Notes

The information in this publication is provided for reference only. All information contained in this publication is believed to be correct and complete. Thermo Fisher Scientific shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance or use of this material. All product specifications, as well as the information contained in this publication, are subject to change without notice.

This publication may contain or reference information and products protected by copyrights or patents and does not convey any license under our patent rights, nor the rights of others. We do not assume any liability arising out of any infringements of patents or other rights of third parties.

We make no warranty of any kind with regard to this material, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Customers are ultimately responsible for validation of their systems.

For technical support, please contact:

Toll-free in US and Canada: 1.877.724.7690

Phone: 1.302.479.7707 | e-mail: nanodrop@thermofisher.com



Learn more at thermofisher.com/nanodrop

thermo scientific