

Model 82*i* Mercury Probe Controller

Electronic control of probe temperature, pressure, flow rate and automated functions

The Thermo Scientific™ Model 82*i* Mercury Probe Controller is one of the four major components of the Mercury Freedom System.

Features

- Microprocessor driven for added automation
- Automates probe calibration
- Enables automated stinger and filter blowback
- Provides power to the probe eliminating the need for power at the stack
- Monitor and regulates pressure using electronic transducers and regulators

Introduction

The Thermo Scientific Model 82*i* probe controller is microprocessor-driven and connected by an umbilical to the stack probe and mercury converter. The controller automates probe calibration and dynamic spiking, and confirms auto dilution. It also monitors probe temperature, measures flow rates and pressure in the sampling loop, and enables automated filter blowback.



Designed to meet the provisions of U.S. EPA 40CFR Parts 60 and 75, the Mercury Freedom System provides a complete mercury monitoring solution that reports elemental, ionic, and total mercury in exhaust stacks from both coal-fired boilers and waste incinerators.

The Model 82*i* probe controller also offers the benefits of the iSeries gas analyzer platform.

The iSeries platform features flexible communications, increased serviceability, and an easier to use interface.

Ethernet connectivity provides efficient remote access, allowing the user to download measurement information directly from the instrument without having to be on site. Captive hardware and slide-apart modules allows easy access for service and periodic maintenance.

Easy-to-program short-cut keys allow the user to jump directly to frequently accessed functions, menus or screens. The larger interface screen can display up to five lines of measurement information while the primary reporting screen remains visible.




Thermo Scientific™ 82*i*
Mercury Probe Controller

Thermo Scientific Model 82i Mercury Probe Controller

Specifications	
Operating temperature	41° to 44°F (5° to 40°C)
Power requirements	120 VAC, 15 amp circuit 220 VAC, one 15 amp circuit 220 VAC, one 30 amp circuit for <200' line 220 VAC, two 30 amp circuits for >200' line
Size and weight	16.75" (W) × 8.62" (H) × 23" (D), 49 lbs. 425 mm (W) × 219 mm (H) × 584 mm (D), 22.2 kg
Air requirements	10 lpm zero air 4 CFM dry air

Flow Diagram: Model 82i Mercury Probe Controller

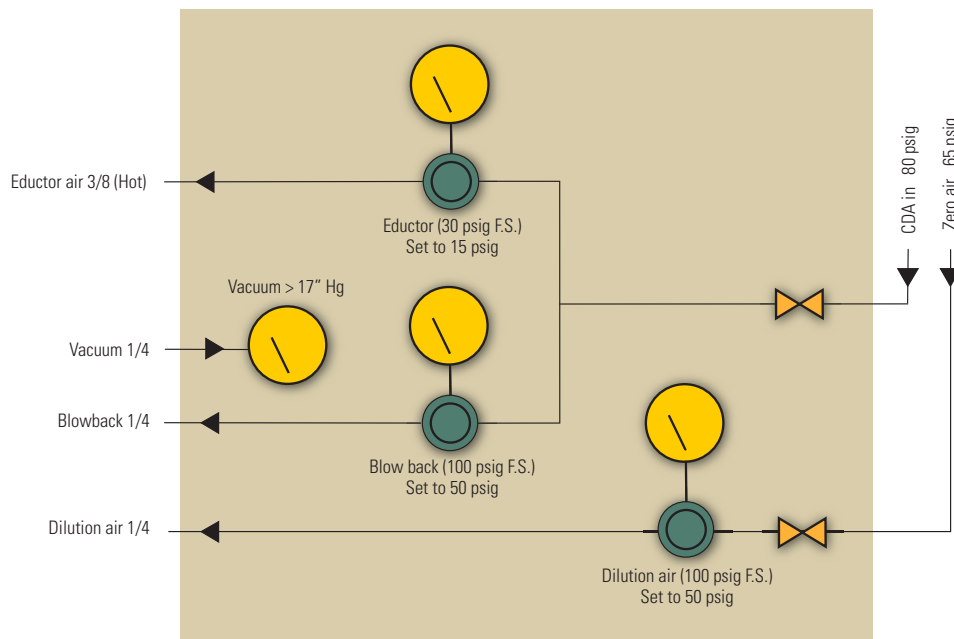

To maintain optimal product performance, you need immediate access to experts worldwide, as well as priority status when your air quality equipment needs repair or replacement. We offer comprehensive, flexible support solutions for all phases of the product life cycle. Through predictable, fixed-cost pricing, our services help protect the return on investment and total cost of ownership of your Thermo Scientific products.

USA
27 Forge Parkway
Franklin, MA 02038
Ph: (508) 520-0430
Fax: (508) 520-2800
orders.aqi@thermofisher.com

India
C/327, TTC Industrial Area
MIDC Pawane
New Mumbai 400 705, India
Ph: +91 22 4157 8800
india@thermofisher.com

China
+Units 702-715, 7th Floor
Tower West, Yonghe
Beijing, China 100007
Ph: +86 10 84193588
info.eid.china@thermofisher.com

Europe
Ion Path, Road Three,
Winsford, Cheshire CW73GA
UK Ph: +44 1606 548700
Fax: +44 1606 548711
sales.epm.uk@thermofisher.com

Find out more at thermofisher.com

ThermoFisher
SCIENTIFIC