



DataTaker DT80 Series4 Data Loggers
Measurement and Control Instrumentation

Stand alone intelligent data loggers

Robust, universal, intelligent data logger for supporting a wide range of applications

dataTaker

Overview

The DataTaker DT80 series are intelligent data loggers capable of connecting to most arrays of sensors through versatile and analog and digital channels, high-speed counter inputs, phase encoder inputs and programmable serial sensor channels. It features feedback control functions, alarm triggers, automatic data transfer and is compatible with various communication devices making it perfect for stand-alone and remote applications.

The rugged design and wide operating temperature range of the DT80 series provides reliable operations and the dEX software assists with logger configuration, viewing real-time data in charts, and retrieval of historical data for analysis.



Data Logging

Data readout via USB or remote data transmission via Wi-Fi/ Ethernet



Connect Any Sensor

Analog: Voltage, Current, RTD, Thermocouple, Strain Gauge and Vibrating wire

Digital: SDI12, MODBUS, pulses



Technical Support

Supporting you all the way from choosing a logger to your solution



Cloud Enabled

Access your data anywhere, anytime via DataTaker Live



Warranty

3 Years of extended warranty on all the loggers



Environmental – Monitor surface and ground water conditions, changes in atmospheric conditions to forecast weather and the presence of air pollutants.



Industrial – Monitor and control process parameters from temperature profiling to design validation.



Structural & Geotechnical – Monitor and control process parameters from design validation to dam wall monitoring.

DT80 DataTaker

Key Benefits

- **Ease of deployment:** On-site connectivity via USB makes it easy to configure and test the deployed monitoring module
- **Universal:** Connects to any sensor. This universal logger can integrate with any type of sensor. Temperature, voltage, current, 4-20 mA loops, resistance, bridges, strain gauges, frequency, digital, serial and calculated measurements can all be scaled, logged and returned in engineering units or within statistical reporting
- **Robust:** With its solid aluminium case this logger is suitable for harsh environments
- **Cost effective:** Low maintenance product. Minimal attention needed after setup



DT80W

An integrated Wi-Fi module features a wireless connection to the logger, for connecting the logger to an existing Wi-Fi network. Programming and controlling can be done wirelessly.

DT80G

An integrated vibrating wire module feature vibrating wire channels which is suitable for land slide prevention, dam wall monitoring, mining exploration, tunnel excavation, concrete curing or any geotechnical application.

DT80C, DT80Cx

The C-Series Logger (DT80C, DT80CG, DT80CW and DT80CGW) has a slightly higher minimum operating temperature, for applications with a less demanding temperature range. These loggers maintain their respective functionality.

DT80GW

DT80GW has both DT80G and DT80W features combined, which will allow geotechnical applications to use wireless connection on Wi-Fi network.

General Specifications

- **Analog input :** Isolated programmable, 15 single-ended, 10 differentials, 5 (3-wire/ 4-wire)
- **Effective resolution :** 18-bit
- **Analog sensors :** Voltage, Current, Thermocouples, RTD's, Thermistors, Monolithic temp. Sensors, Strain Gauges, Bridge Sensors
- **Analog output :** Isolated programmable 16-bit DAC, 0-10 V or 0-20 mA
- **Maximum sampling :** 40 Hz
- **Excitation output :** 12/ 5 V selectable max. 150 mA
- **Switching :** Latching Relay at max. 30 VDC, 1 A
- **Digital sensors :** Digital I/O, Counters (32 bit, maximum 25 kHz)
- **Communication ports :** RJ45, USB, RS232 (Host), (RS232/ RS485/ RS422)
- **Communication protocol :** MODBUS RTU (Master/Slave), SDI12, MODBUS TCP/ IP, ASCII
- **Internet protocol :** HTTP, FTP, SMTP
- **Power requirement :** 10...30 VDC
- **RTC accuracy :** 1 min/year (0...40°C), 4 min/year (-40...+70°C: non-C models, 0...+70°C: C models)

- **Operating temperature :** -40...+70°C (non-C models), 85% RH non-condensing
- **Storage :** 128 MB CF (upgradeable to 4 GB), 8 GB USB 2.0 flash drive (optional)

Standard Logger (DT80)

- **Internal battery :** 6V @ 1.2 Ah

Geo Logger (DT80G, DT80GW)

- **Internal battery :** 6V @ 1.2 Ah
- **Freq. range :** 500...5 kHz
- **Coil resistance :** 50...200 Ω
- **Stimulation :** Single pulse pack (36 V @ 200 us)

Wi-Fi Logger (DT80W, DT80GW)


- **Mode :** Access point or Client
- **Security :** OPEN, PSK_WEP, PSK_WPA, PSK_WPA2

C-Series Logger (DT80C, DT80Cx)

- **Operating temperature:** 0...+70°C, 85% RH non-condensing



dEX 2.0 (Logger Software)

A software with intuitive graphical interface for programming DataTaker that allows you to configure, view real-time data in widgets or charts and retrieve your historical data for analysis.

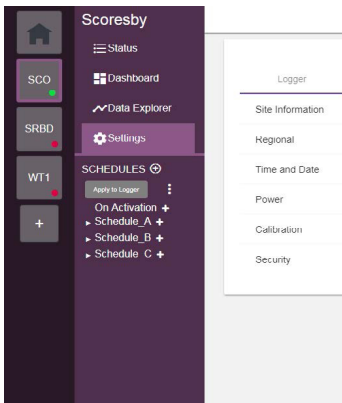



After installation you can run dEX 2.0 and establish connection with your logger through TCP/IP connection either using Ethernet or USB ports. The software is available cross platform and will work on major operating system such as Windows, iOS and Linux.

Utilising Angular JS which allows one page application for simplicity, this dEX 2.0 draws a new approach on programming and viewing data like never been before.

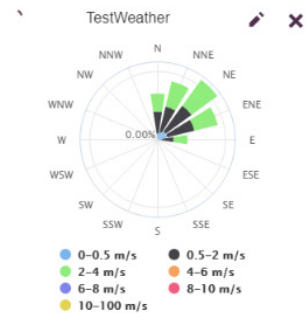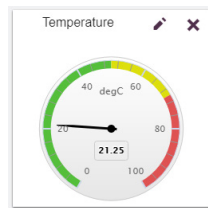

Features:

- Compatible to previous dEX program
- Improved UI design with single centralise page which is easier to move between functions.
- Offline configuration (program template creation)
- Improved programming approach on schedule / channel creation
- Re-defining alarm declaration
- Re-defining MODBUS and SDI12 channels creation
- Home functions that target multiple loggers

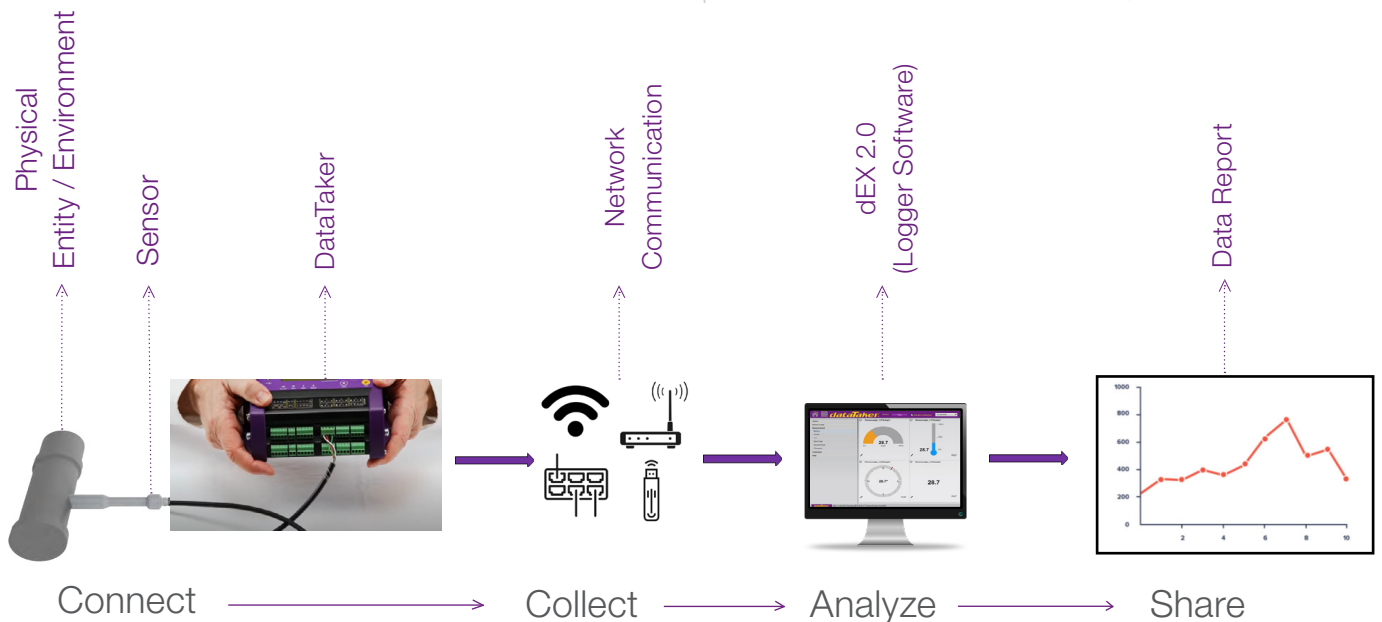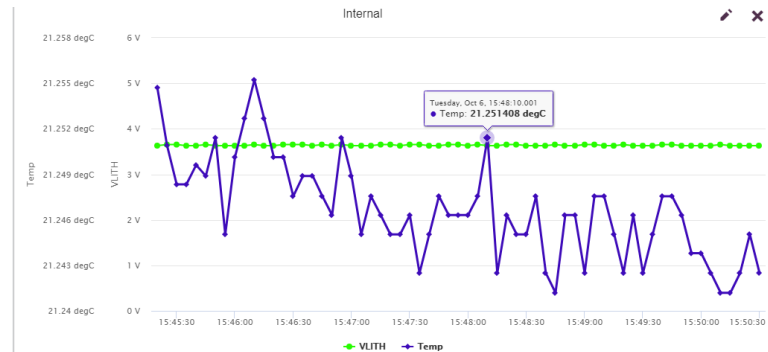

Technical Specifications

Table 1 Technical specifications

Comparison Table for Dataloggers				
Feature	DT80(C)	DT80(C)W	DT80(C)G	DT80(C)GW
Analog input channels	5	5	5	5
Analog output channels	✓	✓	✓	✓
Vibrating wire strain gauge support	–	–	✓	✓
CEM20 modules supported	5	5	5	5
Digital I/O channels (open-drain outputs)	4	4	4	4
Digital I/O channels (logic outputs / SDI-12)	4	4	4	4
Relay output-1 latching relay	✓	✓	✓	✓
High speed counter inputs	4	4	4	4
Phase encoder inputs	2	2	2	2
RS232/422/485 communications port	✓	✓	✓	✓
RS232 host port	✓	✓	✓	✓
USB communications port	✓	✓	✓	✓
Ethernet port	✓	✓	✓	✓
USB memory device port	✓	✓	✓	✓
Intergrated Wi-Fi	–	✓	–	✓
Switched isolated 5/12 V power output	✓	✓	✓	✓
Battery charger for internal/external battery	✓	✓	✓	✓
Internal battery (capacity in Ah)	1.2	1.2	–	–
Modbus master function	✓	✓	✓	✓
Modbus slave (TCP/IP)	✓	✓	✓	✓
LCD display & keypad	✓	✓	✓	✓
Status LEDs	4	4	4	4

Quality Statement: DataTaker operates a quality management system complying with ISO 9001:2008. It is DataTaker's policy to supply customers with products which are fit for their intended purpose, safe in use, perform reliably to published specification and are backed by a fast and efficient customer support service.

Trademarks: DataTaker is a registered trademark.

Specifications: DataTaker reserves the right to change product specifications at any time without notice.

Optional Accessories

Increasing the channel capacity of the DataTaker DT80 range is made very easy by adding DataTaker channel expansion modules (CEM20). Each CEM20 adds 20 universal data logging terminals to the DataTaker data logger.

DT80 series can have up to 5 CEM20 which expands the number of channel to 300 single-ended inputs, 200 differential inputs or 100 3 (4)-wire inputs.

Specifications - CEM20

Analog inputs	<ul style="list-style-type: none">• 60 single-ended• 40 differential• 20 3-wire/4-wire
Max. sampling	<ul style="list-style-type: none">• 20 Hz
Addressing	<ul style="list-style-type: none">• 4-way DIP switches



DataTaker DT80 Series 4 Range		
Dataloggers	Channels	Product Code
DT80/ DT80C Series 4	5-15 Analog, 12 digital channels	DT4DT80, DT4DT80C
DT80G/ DT80CG Series 4	5-15 Analog (+vibrating wire), 12 digital channels	DT4DT80G, DT80CG
DT80W/ DT80CW Series 4	5-15 Analog, 12 digital channels, Wi-Fi built in	DT4DT80W, DT80CW
DT80GW/ DT80CGW Series 4	5-15 Analog (+ vibrating wire), 12 digital channels, Wi-Fi built in	DT4DT80GW, DT4DT80CGW
DataTaker Channel Expansion Module		
CEM20 channel expansion module for series 4 DataTaker	20-60 Analog channels	DT4CEM20

Accessories included in data logger: DataTaker resource thumb drive, AC adaptor, screwdriver & USB cable

DataTaker channel expansion module includes: Analog and control cables for connection to the DataTaker data logger.

In Australia:

For customer service, call 1300-735-292
To fax an order, use 1800-067-639
To email an order, ordersANZ@thermofisher.com

In New Zealand:

For customer service, call 0800-933-966
To fax an order, use 0800-329-246
To email an order, ordersANZ@thermofisher.com

Find out more at: thermofisher.com/datataker

ThermoFisher
SCIENTIFIC